



LS-LC-35D FIRE SAFE USER MANUAL

STEP 1 – OPENING THE SAFE:

1. PRESS THE **START KEY**. THE **LCD DISPLAY** WILL SHOW “-----”.
2. ENTER THE ACCESS CODE. (Default code is: “0-0-0-0”)
3. PRESS THE **START KEY**, AND THE **LCD DISPLAY** WILL SHOW “**OPEN**”.
4. TURN THE KNOB TO OPEN THE DOOR.

STEP 2 – CHANGING THE USER CODE

1. OPEN THE SAFE DOOR (see STEP 1 above)
2. PRESS THE RED **RESET BUTTON** (located in the center of the door on the back side), THE **LCD DISPLAY** WILL SHOW “**SET-CODE**”.
3. WHILE THE LCD IS ALLUMINATED, ENTER YOUR NEW CODE (3-8 DIGITS) AND PRESS THE **START KEY**.
 - THE **LCD** WILL SHOW “**IN**”.
 - YOUR NEW CODE WILL BRIEFLY FLASH ON THE LCD
4. YOUR CODE IS NOW SET.

STEP 3 – CHANGING MASTER CODE

1. OPEN THE SAFE DOOR (see STEP 1 above)
2. PRESS THE **SETUP BUTTON** (LOCATED IN BACK OF DOOR), THE **LCD DISPLAY** WILL SHOW “**SET-CODE**”.
3. PRESS THE **START KEY**, THE **LCD DISPLAY** WILL SHOW **OLD-CODE**.
4. WHILE THE **LCD** IS ALLUMINATED, ENTER THE CURRENT **MASTER CODE** (the default is : “8-8-8-8”) AND PRESS THE **START KEY** (the **LCD** will display “**SET**”).
 - ENTER YOUR NEW **MASTER CODE** (3-8 DIGITS) - the **LCD DISPLAY** will show “**RE-INPUT**”.
 - ENTER YOUR NEW **MASTER CODE** AGAIN - the **LCD DISPLAY** will show “**IN**” AND WILL BRIEFLY SHOW YOUR NEW **MASTER CODE**.

YOUR **MASTER CODE** IS NOW SET

SAFE FEATURES:

- CHANGE THE BATTERIES WHEN THE **LCD DISPLAY** SHOWS “**LO-BAT**”
- THE **LCD DISPLAY** SHOWS **ERROR** IF YOU ENTER AN INCORRECT CODE.
- IF YOU ENTER AN INCORRECT FOUR CONSECUTIVE TIMES THE **LCD DISPLAY** WILL SHOW “**ERROR**” AND THE SAFE WILL FREEZE FOR THREE MINUTES.

